



### How to Adjust Die Clearance

- 1) Loosen LEVER LOCK KNOB.
- 2) Slide HANDLE LEVER so that INDICATOR A or B shows the proper clearance.
- 3) Tighten LEVER LOCK KNOB.

INDICATOR A is more precise than INDICATOR B so we recommend that you check the clearance with INDICATOR B.

Unit:mm

Each line indicates 0.1mm