

# Big Easy Driver User Manual

Doc version 1.2, for BED v1.2

11/04/2012

Brian Schmalz

Schmalz Haus LLC

[www.schmalzhaus.com/BigEasyDriver](http://www.schmalzhaus.com/BigEasyDriver)

brian@schmalzhaus.com

## **Description**

The Big Easy Driver (BED) is a major revision of the Easy Driver stepper driver board. The BED takes power and control signals (STEP and DIRECTION) and produces the signals necessary to step a 0A to 2Amp bi-polar stepper motor. The BED uses an Allegro A4983 or A4988 driver chip.

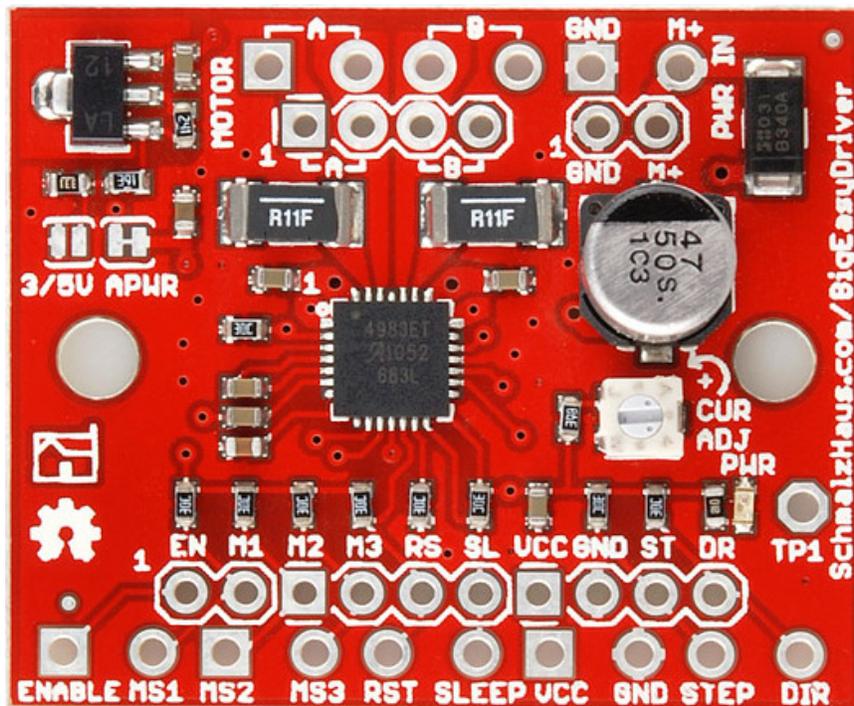


Figure 1: Big Easy Driver v1.2

## Hook Up

The BED has holes for both .100 headers as well as 3.5mm screw terminals. Either or both can be used to connect to the BED however you want. You can put female or male headers in the .100” holes or solder wires directly to the holes.

The minimum number of connections to the BED is 7 – four stepper wires, Power, Gnd and Step. All others are optional. Note that there are two ground connections – one next to the power input, and one next to the step input. Typically these will connect to the power supply ground and the signal ground (from the microcontroller) respectively.

## Top Edge Connections

**Motor:** Connect the four wires from the motor to the four motor connections on the BED. The two “A” connections should connect to one coil, and the “B” connections to the other coil.

**Power:** Connect the power input (+8 to +30V filtered DC) to the M+ connection, and GND from the power supply to the GND connection.

## Bottom Edge Connections

**ENABLE:** This input is pulled down on the board with a 20K Ohm resistor. You can leave it disconnected, or you can drive it from your microcontroller. When low, the driver chip is enabled and the motor is energized. When high, the driver chip is still enabled, but all of the final motor drive circuits are disabled and so no current will flow to the motor.

**MS1, MS2, MS3:** These inputs are all tied high with 20K Ohm resistors. They set the microstep setting. Use the following table to know how to control the microstep settings:

MS1	MS2	MS3	Microstep Resolution	Excitation Mode
L	L	L	Full Step	2 Phase
H	L	L	Half Step	1-2 Phase
L	H	L	Quarter Step	W1-2 Phase
H	H	L	Either Step	2W1-2 Phase
H	H	H	Sixteenth Step	4W1-2 Phase

**RST: (Reset)** This input is tied high with a 20K Ohm resistor on the BED. If this signal is pulled low, the motor driver circuits are shut off, and the driver is reset. Only when this input is high will the driver chip enable the motor driver circuits and pay attention to the STEP input.

**SLEEP:** This input is tied high with a 20K Ohm resistor on the BED. To put the driver chip into a lower power mode (motor driver circuits shut off, charge pump shut down,



## ***Jumper Configuration***

There are two jumpers on the BED – APWR (Alternate Power) and 3/5V. They are located in the upper left corner of the BED.

**NOTE: On the v1.1 of the BED these two jumpers have their silk screen labels reversed.**

APWR (Alternate Power) – This jumper is normally closed (connected). If you cut the trace between the two pads, the BED's voltage regulator chip is disconnected from the circuit, and you can then use the VCC connection on the bottom edge of the board as an input, to power your BED with whatever logic level voltage you want to. (3.0V to 5.5V is the accepted range.) You might choose this option if you wish to power your BED's logic level circuits with an external power source. This jumper is labeled SJ1 in the schematic.

3/5V – This jumper is normally open (dis-connected). You can switch the BED to use 3.3V for its logic level circuits by soldering this jumper closed. You would do this if you wanted to interface your BED to a 3.3V microcontroller for example. This jumper is labeled JS2 in the schematic.

## ***Current Limit Set Potentiometer***

The BED includes a very small pot to allow for the adjustment of the maximum current level through the windings of the motor. On the board, this pot is labeled CUR ADJ. Turning changes the Vref voltage into the A4988 driver chip, and thus changes the maximum current that the driver chip delivers to the motor coils. Note that on v1.2 BED boards the silk screen arrow indicating which direction increases current to the motor is backwards. Use TP1 to determine maximum and minimum current directions to be sure.

The TP1 testpoint can be used to measure the voltage on the CUR\_REF net, which the driver chip uses to determine the maximum current through the motor. Use your volt meter to measure the voltage on TP1 with respect to GND as you turn the pot.

If your BED uses .22 ohm sense resistors (some v1.1 BEDs): The range of the pot produces maximum motor currents from around 0mA (fully clockwise) to 2.4A (fully counterclockwise).

If your BED uses .11 ohm sense resistors (all v1.2 and above BEDs): The range of the pot produces maximum motor currents from around 0mA (fully clockwise) to 5A (fully counterclockwise). Now, the driver can't supply 5A, so the full range of the pot won't be used. A Vref of 1.76V will result in a motor current of 2A.

The equation for this relationship is

$$I_{tripmax} = V_{ref} / (8 * R_s)$$

Where  $I_{tripmax}$  is the maximum current delivered to the motor,  $V_{ref}$  is the voltage on TP1, and  $R_s$  is the sense resistor value.

## ***Power LED***


There is a yellow LED near the lower left corner of the BED labeled PWR. This LED will light any time there is 5V or 3.3V being supplied to the driver chip. If this LED goes off while there is still power being applied to the M+ and GND power inputs, then the voltage regulator chip has either become too hot and shut down, or has detected a short from VCC to GND and has shut off. If the LED turns on and off, then either the M+ power is turning on and off, or the voltage regulator chip is overheating and power cycling to try and stay cool

## ***Heat Dissipation***

The Big Easy Driver can supply up to about 1.4A/phase of current at room temperature. This is due to the four layer construction of the board and the way the board is laid out. When driving high currents, the entire board will act as a heatsink, including the connectors and anything the board is connected to. The driver chip has excellent over temperature protection, so no damage can be done to the driver chip by running the board too hot – it will simply cut out until the chip temperature returns to normal (less than about 150C).

Adding a small heatsink (like Newark 43M6428) and/or using a small fan to cool the drive chip can allow currents in excess of 2A/phase.

## ***Motor Wiring***

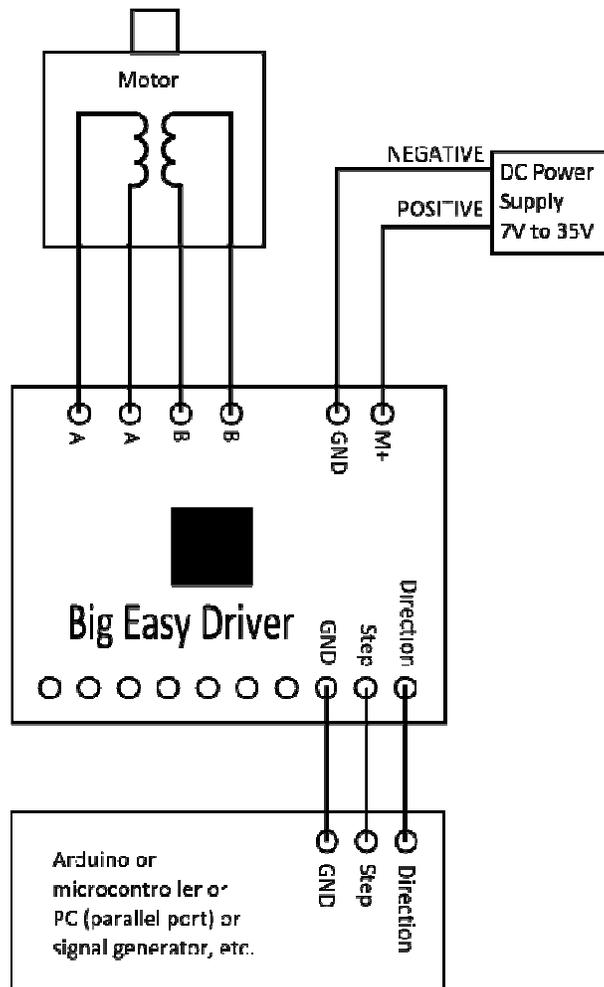


This diagram shows a typical connection (actually, the bare minimum connection) for a BED with a stepper motor and a source for step/direction signals. Of course, you can always connect more of the digital input signals on the BED (SLEEP, MS1, etc.) for more control.

### **Specifications**

The specifications of the Big Easy Driver are the same as for the Allegro A4983 or A4988 stepper driver chip (depending upon which is installed on the board). This includes a maximum of 2A/phase, 16<sup>th</sup>, 8<sup>th</sup>, 1/4, 1/2 and full step modes, 3.3V or 5V logic inputs (jumper selectable).

# Schematic

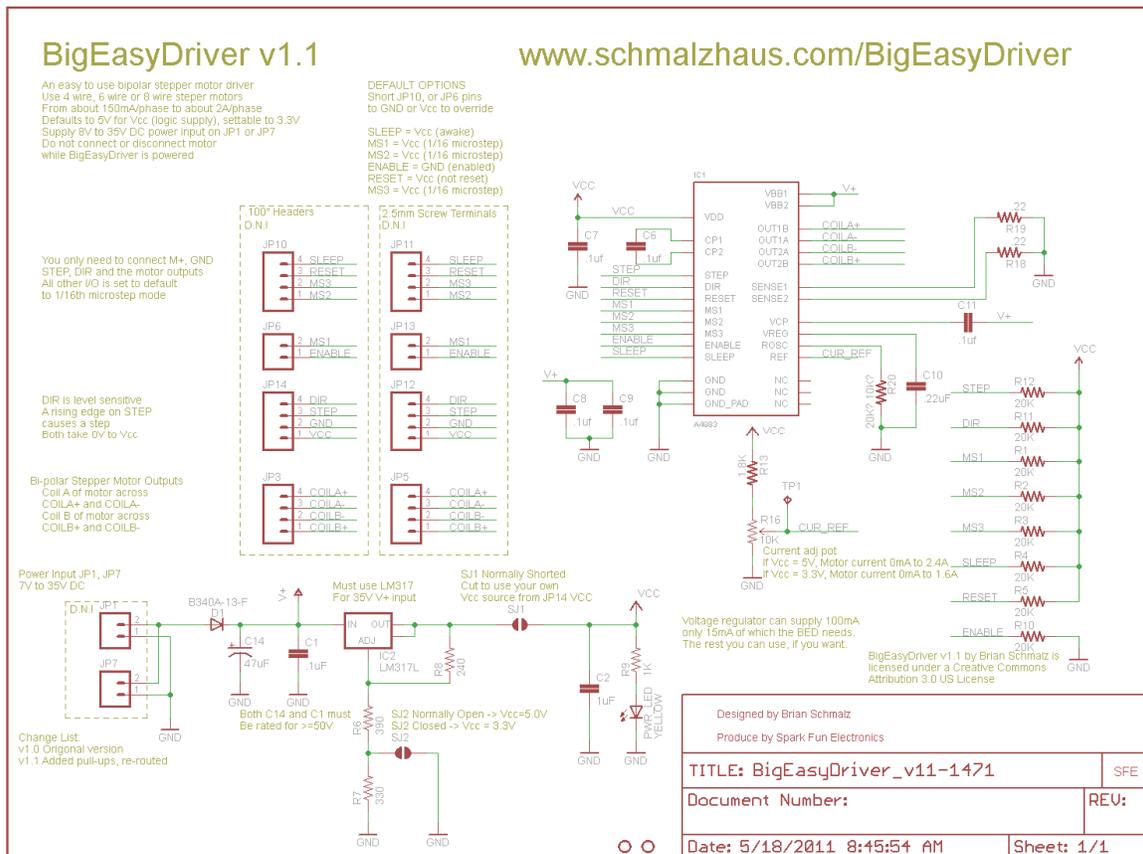

## Parts Placement

This user manual is only an overview. For more information about the technical details of how the BED drives the stepper motor, please see the official Allegro A4983 or A4988 driver datasheet. [www.allegromicro.com](http://www.allegromicro.com)

## License

This document, and the entire BED design, are released under the Creative Commons Attribution 3.0 US License. This means that you may use it for whatever purpose you want, including commercial use, but you MUST give the original author (Brian Schmalz) proper attribution.